


Installation Instructions

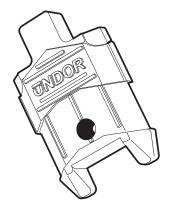

Installation Video

Watch the video installation instructions by scanning this QR code with your smartphone.



Package Contents

Please ensure you have all the materials listed below prior to starting installation. Should you be missing any of the included package contents please contact us by emailing <u>support@undorgarage.com</u>

Package Contents:

2x UNDOR Cord Protectors

1x Masonry Drill Bit

- 2x Stainless Steel Screws
- 2x Concrete Anchors



A replacement garage door seal is not included with UNDOR.

Successfull installation requires a garage door seal that can fill in the 1 inch gap created by UNDOR. Please purchase a new door seal <u>before you begin installation</u>. A 4" wide seal should be enough to fill the gap. There are no universal door seals, please purchase the correct seal for your brand of garage door.

If you are not confident with DIY projects of this sort, please contact a local professional to complete the installation process, including the replacement door seal, for you.

Tools You'll Need

Hammer Drill

Screwdriver

Hammer

Pencil or Marker

Scissors

Soapy Water or other safe lubricant (for door seal)


Eye and Ear Protection

Masking Tape

Let's Do This!

Step 1

With the garage door closed, draw a 6 - 10" pencil line where your garage door seal meets the floor at each end of garage door. This is to mark where to line up UNDOR.



Raise your garage door.

Step 2

Place UNDOR snuggly in contact with side weather stripping and make sure back legs are parallel with pencil line.

UNDOR should be in contact with weather stripping but not crushing it. Ensure UNDOR is straight (not crooked.)



Please note correct placement of UNDOR






Keeping UNDOR firmly in position, begin drilling hole. This is just to mark where to drill the hole. Do not drill the hole completely with UNDOR in place.



Step 4

Remove Undor and continue to drill hole at least 1-1/2" deep into floor. Clear dust away from hole.

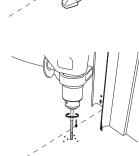


Step 5

Carefully tap plastic anchor into hole with a hammer Ensure anchor is fully inserted and sitting flat against concrete floor.



Step 6

Reposition UNDOR over hole and fasten with supplied screw. DO NOT USE A POWER TOOL - hand tighten the screw using a screw driver until UNDOR is firmly in place.

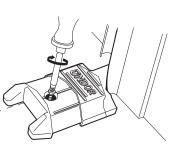

Step 7

Repeat steps 2 - 6 on other side of garage door.

Step 8

Remove old bottom seal from garage door.



Install new 4" bottom seal. We recommend having 2 people to make installation easier





Step 10

Step 11

Single Garage Doors (8ft)

you locate the cut line.

Double Garage Doors (16ft)

experience shrinkage of the

door seal after installation. For

16 ft wide doors, we recom-

track) to allow for possible

Raise garage door and carefully

cut through the bottom seal at

Lower door and confirm door is

should be showing along new

closing properly on top of UNDOR units. No daylight

each mark with scissors.

shrinkage.

Step 12

Step 13


bottom seal.


Wider garage doors may


Mark a line on the new bottom seal using a pencil or marker at the back wall of UNDOR. There


are small raised ridges to help


Reprogram automatic door opener: Carefully lower garage door using "teach" or "learn" buttons until bottom seal flattens on top of UNDOR units. The door seal should make contact with the floor inbetween the UNDOR units.

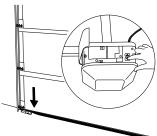

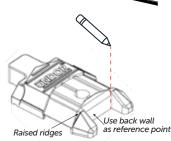

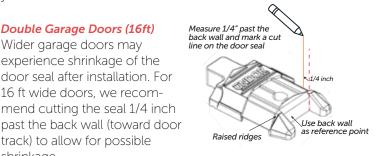

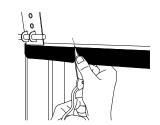



Helpful Tips

For some helpful installation tips, visit the installation page on our website at www.undorgarage.com

UNDOR does not work with every garage door.

UNDOR is designed to work with automatic garage door openers and roll up sectional style doors. Up and over, gable, or other styles of garage doors will not work with UNDOR.

If you do not have an automatic garage door opener, you will need to modify your locking mechanism. Please contact your local garage door service company for assistance.